



SECCIONES-ALZADOS ACTUALES
Escala 1/50

0 0,5 1 2 3 4

A scale bar is located at the bottom right of the page. It consists of a horizontal line with vertical tick marks at intervals of 0.5 units, labeled from 0 to 4. The text 'SECCIONES-ALZADOS ACTUALES' and 'Escala 1/50' is positioned above the scale bar.