


SECCIÓN A-A'

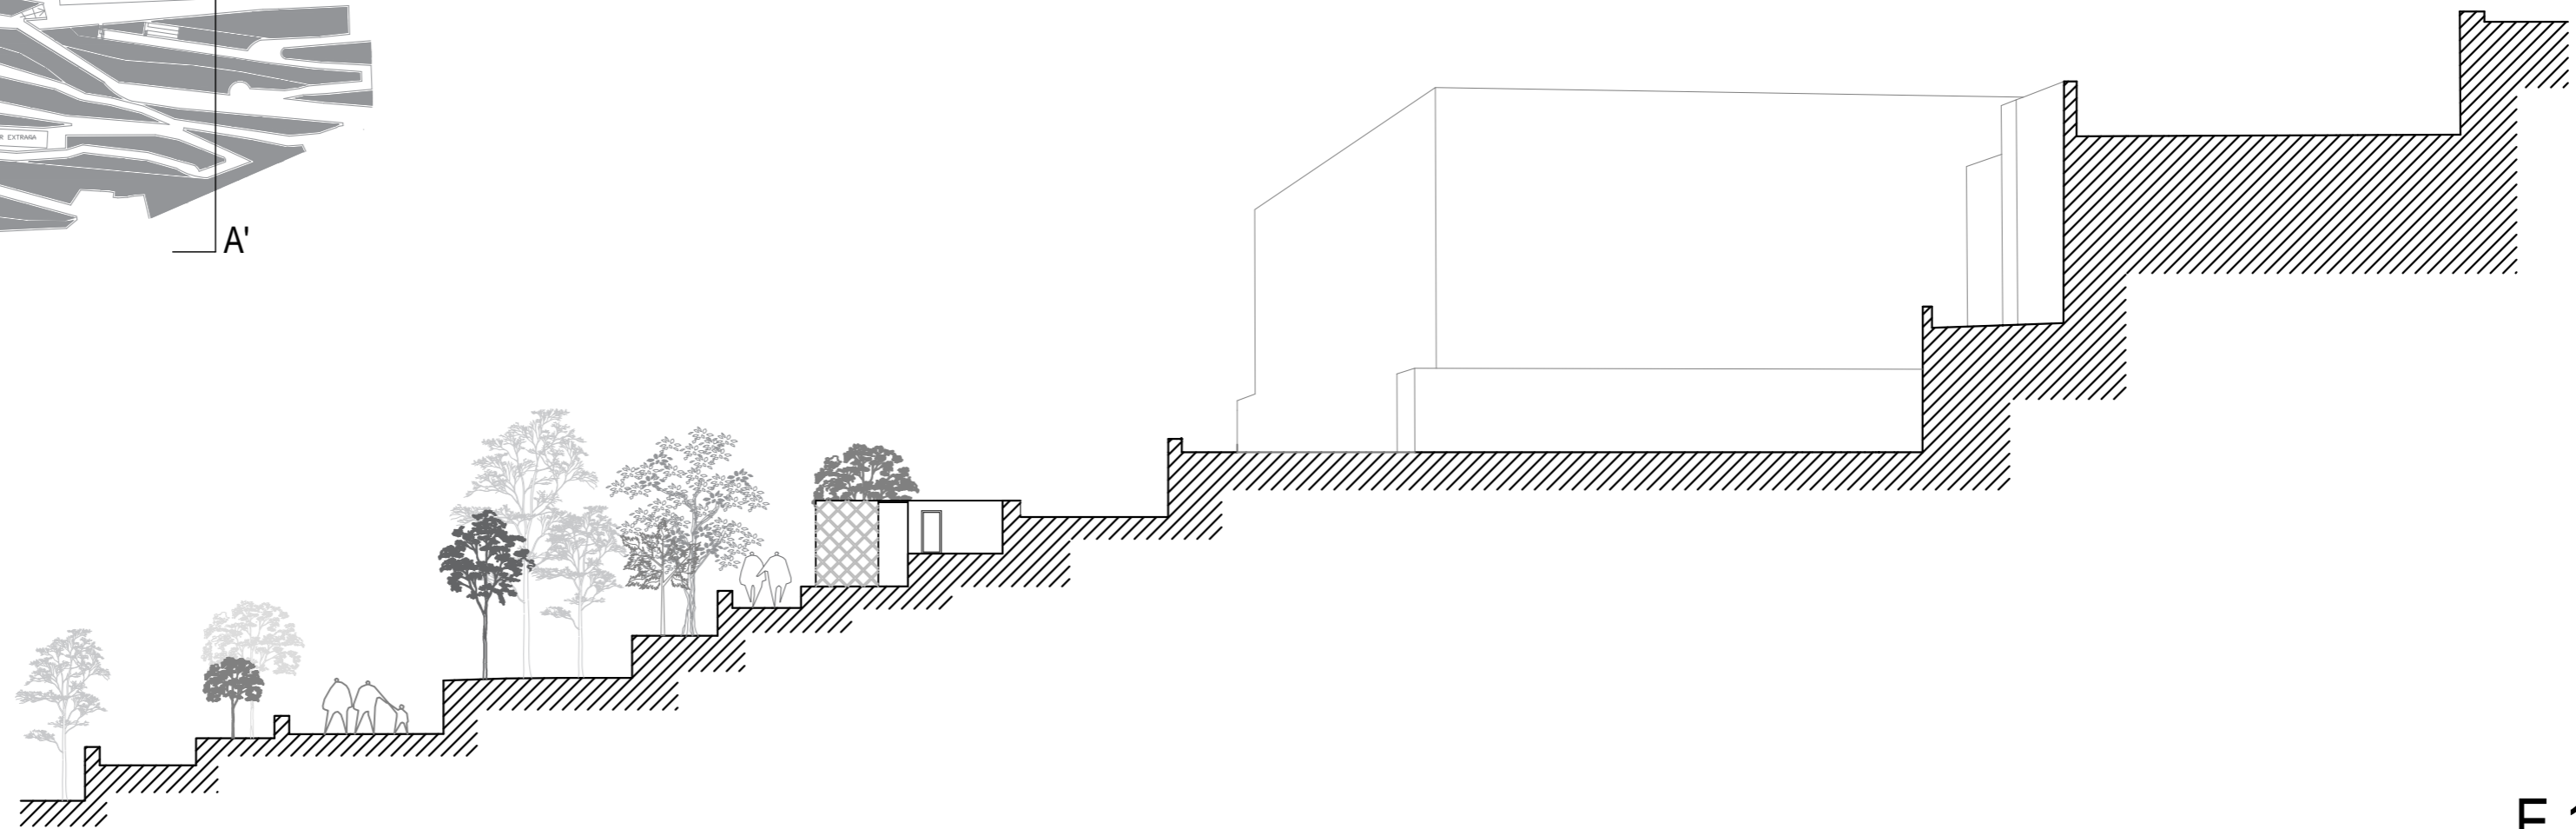

E 1 : 200

A scale bar is located at the bottom right of the drawing. It consists of a horizontal line with vertical tick marks at intervals of 1 unit, labeled from 0 to 20. The text 'E 1 : 200' is positioned above the scale bar.